
VLT[®] HVAC Drive

Danfoss

FC 102		
+24 V	12	
+24 V	13	
D IN	18	
D IN	19	
COM	20	
D IN	27	
D IN	29	
D IN	32	
D IN	33	
D IN (S.Stopp)**	37	
+10 V	50	Analog Input 0-10V DC
A IN (S201 U-I)	53	
A IN (S202 U-I)	54	
COM	55	
A OUT	42	
A OUT	39	
Relay 1	01	
	02	
	03	
Relay 2	*04	
	*05	
	*06	

[illegible]

Erstellt von: Schulung

It is recommended to set all the motor parameters in Par. 1-20 to 1-26 and then perform Automatic Motor Adaption (AMA) in Par. 1-29.